Julie R. Ingelfinger, M.D., *Editor*

Ultrasound Guidance for Pleural-Catheter Placement

Adriano Peris, M.D., Lorenzo Tutino, M.D., Giovanni Cianchi, M.D., and Gianfranco Gensini, M.D.

The following text summarizes information provided in the video.

From Azienda Ospedaliera Universitaria Careggi, Florence, Italy.

N Engl J Med 2018;378:e19.
DOI: 10.1056/NEJMvcm1102920
Copyright © 2018 Massachusetts Medical Society.

OVERVIEW

The indications for pleural drainage are diagnostic (to collect samples for cytologic, biologic, or chemical analysis) and therapeutic (to remove large fluid collections and improve respiratory function). Pleural drainage can be performed at the bedside with a single thoracentesis or, for continuous drainage, with the insertion of an intercostal drain.[1]

The use of ultrasound guidance permits selection of the best site for access to the pleural effusion, allows step-by-step, real-time visualization of the lung structures and the advancing needle, and reduces the risk associated with the procedure.[2] The introduction of ultrasonography to guide pleural-catheter placement has decreased both the cost of the total hospital stay and procedure-related risks,[3-6] since the technique facilitates the selection of the most suitable site for insertion and provides real-time visualization of the chest structures and the devices used. Lung ultrasonography may also be more accurate than chest radiography when the patient is in the supine position and may be as accurate as computed tomography (CT) for the detection of pleural effusions.[4] The safety and advantages of ultrasound guidance for pleural-catheter placement have also been confirmed in patients with cancer who have malignant pleural effusions.[7] This video demonstrates ultrasound-guided placement of a small-bore pigtail catheter for drainage of a pleural effusion.

INDICATIONS

The two most common indications for placement of a pleural catheter are drainage of the pleural space (in a patient with pleural effusion, empyema, or pneumothorax) and endocavitary administration of a drug. The ultrasound-guided insertion of a small-bore catheter is preferable to other techniques (e.g., single thoracentesis or the insertion of an intercostal, large-bore chest tube) since this approach permits continuous removal of fluid and is minimally invasive.[2]

CONTRAINDICATIONS

Before the procedure is initiated, it must be determined whether there are any major contraindications. These include coagulation abnormalities, skin infections or wounds, and skin that has been otherwise compromised. The inability to obtain a clear acoustic window with preprocedural ultrasonography is also a contraindication.

The New England Journal of Medicine
Downloaded from nejm.org on May 28, 2018. For personal use only. No other uses without permission.
Copyright © 2018 Massachusetts Medical Society. All rights reserved.

SHOUT
SHARE
IT

EQUIPMENT

The brightness mode, generally known as the B mode of the ultrasound unit, should be used to locate the structures of the chest and the pleural effusion. The unit should also be equipped with an appropriate probe: a convex probe with a frequency of 2.5 to 3.5 MHz or a cardiac probe with a frequency of 2.5 to 5.0 MHz. A cardiac probe is used in the video.

Drainage catheters vary in length and diameter. The diameter of the catheter used depends on the type of pleural fluid that appears to be present. A larger diameter should be used to drain an empyema or a hemothorax.

The drainage kit used in the video is equipped with an 8-French flexible pigtail catheter, a metal stiffening cannula, two fascial dilators, an echogenic blunt introducer needle with a pointed stylet, and a J-tip guidewire. The stiffening cannula facilitates the straightening of the curled tip of the pigtail catheter during insertion. The introducing needle has a pointed stylet that when removed exposes a blunt tip. The dilators facilitate gentle dilation of the tissues of the chest wall. The catheter, stiffening cannula, needle, and dilators are hollow, which allows them to slide over a guidewire, in accordance with the Seldinger technique.

To collect pleural fluid and to allow continuous in situ drainage, a large syringe, a three-way stopcock, sterile drainage tubing, a collection bag, and sterile sutures will be needed. Specimen tubes for the collection of fluid samples for culture and sensitivity analysis are also needed. Sterile gauze dressing is needed for the puncture site.

The procedure is aseptic. You will need a sterile gown and mask and sterile gloves and should follow your institution's procedures regarding hand hygiene. To prepare the patient's skin, you will need a cleansing solution, such as 2% chlorhexidine, and sterile gauze. You will also need sterile drapes and towels, a sterile sleeve to cover the ultrasound probe, and sterile ultrasound gel. To provide local anesthesia, you will need a 10-ml syringe filled with 2% lidocaine.

Before starting the procedure, place the cannula in the catheter and straighten it. Then place the stylet in the needle. Next, assemble the drainage system by connecting the drainage bag to the drainage tubing and the tubing to the stopcock. To prevent any aspiration of air, make sure that the stopcock that provides access to the patient is closed.

ULTRASONOGRAPHY OF THE THORAX

Place the ultrasound probe in a position that is parallel to the intercostal space. To obtain the best acoustic window, hold the probe firmly and perpendicular to the chest wall. Normally, the visceral and parietal pleurae are juxtaposed and move with the respiratory cycle. In contrast, the pleural effusion will appear as an anechoic space between the two pleurae.

The acoustic window should provide clear visualization of the entire ultrasound field. You should be able to identify the structures below the probe. Starting from the surface, these structures include the skin, muscles, parietal pleura, visceral pleura, and lung parenchyma. The pleural effusion appears as a space between the two pleurae. Ultrasonography can also provide quantitative and qualitative information about the nature of the fluid, since it can detect suspended particles and septate fluid collection. Adhesions or intrapleural septae increase the risk of complications, such as bleeding and injury to the lung parenchyma. In such cases, you should consider abandoning the procedure.

The volume of the pleural effusion may be estimated with the formula described by Balik et al.,[8] in which the interpleural distance is measured in milli-

The New England Journal of Medicine
Downloaded from nejm.org on May 28, 2018. For personal use only. No other uses without permission.
Copyright © 2018 Massachusetts Medical Society. All rights reserved.

meters and multiplied by 20, with the patient in the supine position. The volume estimated has been shown to correlate significantly ($P<0.05$) with the drained volume.[6] The use of small-bore catheters, which are generally characterized by a curled, blunt tip (hence the name "pigtail catheter"), in combination with ultrasound guidance, further minimizes trauma to tissues and increases patient comfort.

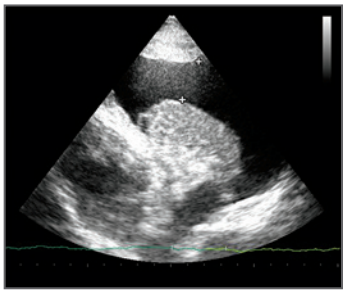

Figure 1. Ultrasound Measurement of a Pleural Effusion.

PREPARATION

If circumstances permit, explain the procedure to the patient before beginning. You should also obtain written informed consent. Coagulopathies should be ruled out; if present, they should be corrected, if possible, before the procedure is initiated. An assistant, not necessarily a physician, should always be present to help the operator prepare the equipment and to assist in positioning the patient, if needed.

Before starting the procedure, place the patient in a laterally recumbent or upright sitting position in accordance with the patient's clinical condition and in order to expose the best acoustic window. In this video, we describe a lateral–posterior approach in a mechanically ventilated patient. After positioning the patient, perform a complete ultrasound examination of the thorax.

The most suitable point of insertion is that at which the maximum width of the pleural effusion has been detected (Fig. 1). Mark the point of intended insertion with a skin marker.

In the best-case scenario, the acoustic window should show the following structures, from surface to depth: superficial structures (skin and muscles), the parietal pleura, the visceral pleura, and the lung parenchyma. The pleural effusion appears as a space (usually anechoic) between the parietal and visceral pleura, with respiratory movement of the lung within the effusion.[4] To perform the procedure safely, the width of the pleural effusion should be at least 1.5 cm.

During the examination, it is useful to consider the type of effusion. Look for suspended particles or septae floating in the mass of liquid.

Using gauze soaked in a sterile disinfectant preparation, thoroughly disinfect the skin and place sterile drapes around the selected site. Prepare the probe. With the help of a second operator, apply ultrasound gel to the probe and cover it with the sterile sleeve. Secure the sleeve to the probe. The equipment kit used in this video contains a blunt needle equipped with a pointed stylet (Fig. 2). To ensure minimal invasiveness and to prevent lung puncture when advancing the needle, remove the pointed stylet during the last passage through extrapleural structures.

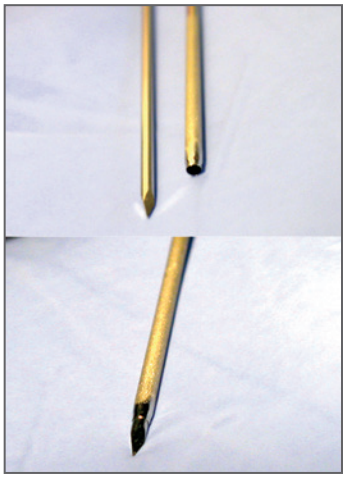

Figure 2. The Blunt Needle and Its Pointed Stylet.

PROCEDURE

Using ultrasonography, reconfirm the location of the pleural effusion in the area where the catheter is to be inserted. Maintain the position of the probe on the chest wall, and introduce the needle with its stylet to a length of 1.5 to 2.0 cm through the skin, fascia, and intercostal muscle. Once the needle tip is close to the parietal pleura, remove the stylet and connect a 10-ml syringe to the distal part of the needle.

Continue introducing the needle while gently aspirating. Identify the distal tip of the needle as it enters the interpleural space, keeping the structures below it in view (Fig. 3). Confirm the penetration of the needle into the pleural space by aspirating pleural fluid into the syringe.

Once you have reached the pleural space, disconnect the syringe and slide the guidewire through the needle into the pleural space. Confirm the intrapleural location of the wire as you visualize it with the ultrasound unit. Remove the needle and advance the dilator over the wire for half of its length, passing it through the

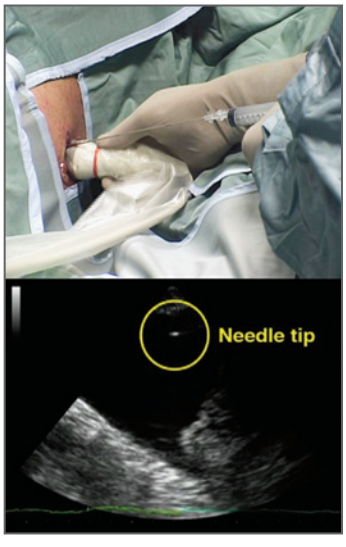

Figure 3. Identification of the Needle in the Pleural Space.

The New England Journal of Medicine
Downloaded from nejm.org on May 28, 2018. For personal use only. No other uses without permission.
Copyright © 2018 Massachusetts Medical Society. All rights reserved.

skin and the parietal structures. To advance the dilator, push it firmly but gently against the skin, twisting it as it advances.

Slide the previously assembled catheter, with the stiffening cannula in place, over the wire. Make sure that the wire extends outside the proximal part of the catheter. Then advance the catheter by half of its length — holding both the cannula and the wire firmly — to avoid any damage to the lung (Fig. 4).

Once the catheter has been inserted, completely withdraw the wire and the inner stiffening cannula simultaneously. Use your finger to close the proximal hub of the catheter, acting quickly to prevent any aspiration of air, which is a risk, particularly for patients who are breathing spontaneously. Connect the catheter to the preassembled drainage system.

Figure 4. Insertion of the Pigtail Catheter.

To drain the effusion and to introduce fluid into the drainage bag, use the syringe and the stopcock. Close the stopcock in the direction of the drainage bag and initiate drainage with the large syringe. When the syringe is full, close the stopcock to the patient and release the fluid into the drainage bag. Repeat these steps until the pleural fluid is completely drained and you feel no resistance with aspiration (Fig. 5). The collected fluid can be used for culture and other laboratory tests.

Figure 5. The Drainage System.

Allow the fluid to drain gradually in response to gravity by hanging the drainage bag on the side of the effusion, just below the patient's thorax. Before securing the catheter, make sure that all the fluid has been drained and that the effusion can no longer be detected on ultrasonography. If you see residual pleural fluid, slowly pull out the catheter by no more than half its length and begin to gently aspirate the liquid with the same syringe, as long as it is possible to drain fluid again without feeling any "pulling," or resistance, from the syringe. Repeat this procedure until the residual fluid has been removed.

Make sure that you do not withdraw the catheter too far. The curled end of the catheter and its perforations should remain within the pleural space.

If there is no residual fluid, disconnect the syringe and leave the stopcock open to allow flow from the patient to the collection bag. Be certain that you have the stopcock in the correct position. Perform a postprocedural check on the ultrasonography to confirm the success of the procedure.

Finally, make sure that all connections are secure in order to avoid accidental disconnections and the entry of air into the pleural space. Secure the catheter with a surgical suture, clean the surrounding skin, and apply a sterile dressing. Make sure that the catheter is not bent or occluded during placement of the dressing.

Dispose of all needles, syringes, and other "sharps" properly, in accordance with the policy at your institution. A standard chest radiograph should be obtained after completion of the procedure to confirm that the catheter is correctly positioned and to rule out possible complications.

In patients who are receiving positive-pressure ventilation, there is no need for a water seal if a small-bore catheter is used (up to 10-French). The small diameter of the tubing and the column of fluid itself prevent air from entering the pleural space.

The catheter can be left in place for several days to allow continuous drainage. When a simple drainage bag is used, it should be hung at a level lower than the patient's thorax so that the fluid will drain gradually, in response to gravity.

COMPLICATIONS

Complications of ultrasound-guided insertion of a pigtail catheter are few. However, injury to the lung or the vessels of the chest wall can occur during the inser-

The New England Journal of Medicine
Downloaded from nejm.org on May 28, 2018. For personal use only. No other uses without permission.
Copyright © 2018 Massachusetts Medical Society. All rights reserved.

tion of the needle. In these situations, a hemothorax or pneumothorax may occur. Other possible complications, also rare, include puncture of intrathoracic structures or intraabdominal organs. Rapid drainage of a very large pleural effusion, particularly in a patient who is not receiving mechanical ventilation, can cause discomfort and may also cause reexpansion pulmonary edema.

Further evaluation is mandatory if the patient shows clinical deterioration or unexpected hypoxemia or if changes in the pleural effusion occur during drainage. Such changes include the presence of blood, clots, or air. In such instances, further evaluation is mandatory and a chest radiograph or CT study of the chest should be obtained. Depending on the findings, there may be a need for additional examinations or procedures, such as insertion of a chest tube or surgical revision.

SUMMARY

Ultrasound guidance is currently considered to be the safest means of positioning a pleural catheter and draining a pleural effusion.[5] This technique requires the development of skill in the use of ultrasonography and in catheter placement. Careful screening of patients for whom the procedure is appropriate, the presence of an experienced operator, and access to a detailed clinical protocol can minimize complications.

No potential conflict of interest relevant to this article was reported.
Disclosure forms provided by the authors are available with the full text of this article at NEJM.org.

REFERENCES

1. Havelock T, Teoh R, Laws D, Gleeson F. Pleural procedures and thoracic ultrasound: British Thoracic Society Pleural Disease Guideline 2010. Thorax 2010;65:Suppl 2ii61-ii76.
2. Feller-Kopman T, Light R. Pleural disease. N Engl J Med 2018;378:740-51.
3. Patel PA, Ernst FR, Gunnarsson CL. Ultrasonography guidance reduces complications and costs associated with thoracentesis procedures. J Clin Ultrasound 2012;40:135-41.
4. Volpicelli G, Elbarbary M, Blaivas M, et al. International evidence-based recommendations for point-of-care lung ultrasound. Intensive Care Med 2012;38:577-91.
5. Daniels CE, Ryu JH. Improving the safety of thoracentesis. Curr Opin Pulm Med 2011;17:232-6.
6. Peris A, Tutino L, Zagli G, et al. The use of point-of-care bedside lung ultrasound significantly reduces the number of radiographs and computed tomography scans in critically ill patients. Anesth Analg 2010;111:687-92.
7. Cavanna L, Mordenti P, Bertè R, et al. Ultrasound guidance reduces pneumothorax rate and improves safety of thoracentesis in malignant pleural effusion: report on 445 consecutive patients with advanced cancer. World J Surg Oncol 2014;12:139.
8. Balik M, Plasil P, Waldauf P, et al. Ultrasound estimation of volume of pleural fluid in mechanically ventilated patients. Intensive Care Med 2006;32:318-21.

Copyright © 2018 Massachusetts Medical Society.

The New England Journal of Medicine
Downloaded from nejm.org on May 28, 2018. For personal use only. No other uses without permission.
Copyright © 2018 Massachusetts Medical Society. All rights reserved.